




PRECAST CONCRETE MANHOLE

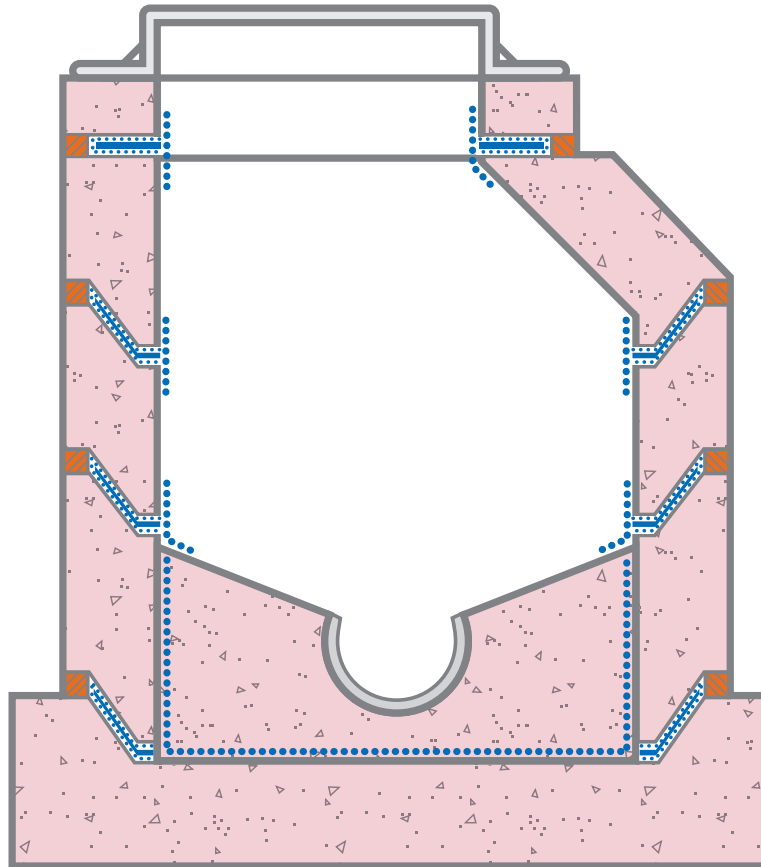

..... CONCENTRATE SLURRY COAT ■ CONCENTRATE DRY-PAC ■ ADMIX ■ PATCH'N PLUG

STEP 1: Place blocks in joints to allow 0.5" - 0.75" (13 - 19 mm) gap between precast sections. Fill exterior gap with Xypex Patch'n Plug or Xypex Megamix II to a depth of 2" - 3" (50 - 75 mm).

STEP 2: In the interior of the manhole, apply slurry of Xypex Concentrate to the interior gap at the rate of 1.5 lb./sq.yd. (0.8 kg/m²) then fill gap to the surface with Xypex Concentrate in Dry-Pac form. Apply slurry of Xypex Concentrate at 1.5 lb./sq.yd. (0.8 kg/m²) over Dry-Pac and extending to 6" (150 mm) on either side.

STEP 3: Apply slurry coat of Xypex Concentrate to interior of bottom ring and floor where the invert interfaces at a rate of 1.5 lb./sq.yd. (0.8 kg/m²).

STEP 4: Place concrete invert using Xypex Admix treated concrete and cure in accordance with ACI, EN or other accepted quality concreting authority.

Note: Schematic drawing shows Xypex Admix application. Specifier may consider the alternative use of Xypex dry shake (DS-Series) or Xypex coatings, where applicable. Refer to Xypex Standard Specifications for more information.